



## Tap Position Indicator EE-604 with Tap Change Counter

EMCO's Tap Position Indicators are used to display the Tap position of On-Load Tap Changer (OLTC). TPI type EE-604 comes with Tap Change Counter which counts the number of Tap Changes occurred. This count is presettable.

Three wires coming from the OLTC are connected to Max, Min and Wiper respectively on the TPI. The display is updated as the Tap changes along with Counter or Voltage.

### Specifications :

Max. No. of Taps	:	35 or user defined
Step Resistance / Tap	:	1KE or user defined
Display	:	2 digit for Tap No. 6 digit for Counter
Power Consumption	:	95-260V AC/DC, 5VA
Panel Cutout Dimensions	:	90 x 90 mm
Depth	:	110 mm
Operating temperature	:	0° - 50°C
Weight	:	0.5 Kg. approx.
Options	:	Dual 4-20 mA output for SCADA 4-20mA Current Input instead of Resistive Input

### EMCO ELECTRONICS

**Mumbai Office :** 302, Vasan Udyog Bhavan, Senapati Bapat Marg, Opp. Phoenix Mill, Lower Parel (W), Mumbai-400013. Tel.: +91-22-2490 2283 / 2492 3183 Fax : +91-22-2495 1024

Email: [office@emcoelectronics.org](mailto:office@emcoelectronics.org)

**Factory :** Unit No. 13, Kedamath, Tungareshwar Industrial Complex No. 1, Village Sativali, Vasai (E), Dist. Thane - 401 208. Tel.: +91-250-648 1782/1804/0114 Fax : +91-250-248 1087

Email : [mumbai@emcoelectronics.org](mailto:mumbai@emcoelectronics.org), [sales.emcoelectronics@gmail.com](mailto:sales.emcoelectronics@gmail.com)

**Bangalore Office :** 15, Wood Street, (1st Floor) Richmond Road, Bangalore - 560 025

Tel.: +91-80-2557 0215 Fax : +91-80-2556 6606 Email :

[emcoblr@emcoelectronics.org](mailto:emcoblr@emcoelectronics.org), [emcosalesbangalore@gmail.com](mailto:emcosalesbangalore@gmail.com)

[www.emcoelectronics.org](http://www.emcoelectronics.org)



Product Specifications are subject to change without notice